

# THK General Catalog

## Index of Model Numbers

<b>A</b>	
Model AL [Link Ball].....	<b>B-834</b>
Model A-M6F (Grease Nipple) [Accessories for Lubrication].....	<b>B-866</b>
Model A-MT6×1 (Grease Nipple) [Accessories for Lubrication].....	<b>B-866</b>
Model A-PT1/8 (Grease Nipple) [Accessories for Lubrication].....	<b>B-866</b>

<b>B</b>	
Model B [Cross Roller Guide/Ball Guide] .....	<b>B-498</b>
Model BF Square Type Support Unit on the Supported Side [Ball Screw] .....	<b>B-764</b>
Model BIF (Preload Type of Precision Ball Screw) [Ball Screw].....	<b>B-652</b>
Model BIF (Unfinished Shaft Ends) [Ball Screw] ..	<b>B-594</b>
Model BK Square Type Support Unit on the Fixed Side [Ball Screw].....	<b>B-756</b>
Model BL [Link Ball].....	<b>B-836</b>
Model BLK (No Preload Type of Precision Ball Screw) [Ball Screw].....	<b>B-686</b>
Model BLK (No Preload Type of Rolled Ball Screw) [Ball Screw].....	<b>B-738</b>
Model BLR [Ball Screw]	
Model BLR Large Lead Rotary-Nut Precision Ball Screw .....	<b>B-722</b>
Model BLR Large Lead Rotary Nut Rolled Ball Screw.....	<b>B-748</b>
Model BLW (Preload Type of Precision Ball Screw) [Ball Screw].....	<b>B-652</b>
Model B-M6F (Grease Nipple) [Accessories for Lubrication].....	<b>B-866</b>
Model B-MT6×1(Grease Nipple) [Accessories for Lubrication].....	<b>B-866</b>
Model BNFN (Preload Type of Precision Ball Screw) [Ball Screw].....	<b>B-652</b>
Model BNFN (Unfinished Shaft Ends) [Ball Screw] ..	<b>B-594</b>
Model BNF (No Preload Type of Precision Ball Screw) [Ball Screw].....	<b>B-688</b>
Model BNF (Unfinished Shaft Ends) [Ball Screw] ...	<b>B-594</b>
Model BNK [Ball Screw]	
BNK0401-3 Shaft Diameter: 4; Lead: 1 .....	<b>B-608</b>
BNK0501-3 Shaft Diameter: 5; Lead: 1 .....	<b>B-610</b>
BNK0601-3 Shaft Diameter: 6; Lead: 1 .....	<b>B-612</b>
BNK0801-3 Shaft Diameter: 8; Lead: 1 .....	<b>B-614</b>
BNK0802-3 Shaft Diameter: 8; Lead: 2 .....	<b>B-616</b>
BNK0810-3 Shaft Diameter: 8; Lead: 10.....	<b>B-618</b>
BNK1002-3 Shaft Diameter: 10; Lead: 2.....	<b>B-620</b>
BNK1004-2.5 Shaft Diameter: 10; Lead: 4.....	<b>B-622</b>
BNK1010-1.5 Shaft Diameter: 10; Lead: 10.....	<b>B-624</b>

BNK1202-3 Shaft Diameter: 12; Lead: 2 .....	<b>B-626</b>
BNK1205-2.5 Shaft Diameter: 12; Lead: 5 .....	<b>B-628</b>
BNK1208-2.6 Shaft Diameter: 12; Lead: 8 .....	<b>B-630</b>
BNK1402-3 Shaft Diameter: 14; Lead: 2 .....	<b>B-632</b>
BNK1404-3 Shaft Diameter: 14; Lead: 4 .....	<b>B-634</b>
BNK1408-2.5 Shaft Diameter: 14; Lead: 8 .....	<b>B-636</b>
BNK1510-5.6 Shaft Diameter: 15; Lead: 10 ....	<b>B-638</b>
BNK1520-3 Shaft Diameter: 15; Lead: 20 .....	<b>B-640</b>
BNK1616-3.6 Shaft Diameter: 16; Lead: 16 ....	<b>B-642</b>
BNK2010-2.5 Shaft Diameter: 20; Lead: 10 ....	<b>B-644</b>
BNK2020-3.6 Shaft Diameter: 20; Lead: 20 ....	<b>B-646</b>
BNK2520-3.6 Shaft Diameter: 25; Lead: 20 ....	<b>B-648</b>
Model BNS Heavy-load Type: Straight-curved Motion [Ball Screw].....	<b>B-728</b>
Model BNS-A Compact Type: Straight-curved Motion [Ball Screw].....	<b>B-726</b>
Model BNT (No Preload [Square Nut] Type of Precision Ball Screw) [Ball Screw].....	<b>B-716</b>
Model BNT (No Preload [Square Nut] Type of Rolled Ball Screw) [Ball Screw].....	<b>B-744</b>
Model B-PT1/8 (Grease Nipple) [Accessories for Lubrication].....	<b>B-866</b>
Model BS [LM Stroke].....	<b>B-474</b>
Model BTK (No Preload Type of Rolled Ball Screw) [Ball Screw] .....	<b>B-738</b>

<b>C</b>	
Model CF(Popular Type (Cylindrical Outer Ring)) [Cam Follower].....	<b>B-808</b>
Model CF-A (Cam Follower with Hexagon Socket (Cylindrical Outer Ring)) [Cam Follower] .....	<b>B-810</b>
Model CF-B (Cam Follower with Hexagon Socket (Cylindrical Outer Ring)) [Cam Follower] .....	<b>B-812</b>
Model CFH-A (Eccentric Cam Follower with Hexagon Socket (Cylindrical Outer Ring)) [Cam Follower].....	<b>B-814</b>
Model CFH-M-A (Made of Stainless Steel) [Cam Follower].....	<b>B-814</b>
Model CFH-MR-A (Made of Stainless Steel) [Cam Follower].....	<b>B-814</b>
Model CFH-R-A (Eccentric Cam Follower with Hexagon Socket (Spherical Outer Ring)) [Cam Follower].....	<b>B-814</b>
Model CF-M (Stainless Steel Type) [Cam Follower].....	<b>B-808</b>
Model CF-M-A (Stainless Steel Type) [Cam Follower].....	<b>B-810</b>
Model CF-M-B (Stainless Steel Type) [Cam Follower].....	<b>B-812</b>
Model CF-MR (Stainless Steel Type) [Cam Follower].....	<b>B-808</b>

Model CF-MR-A (Stainless Steel Type) [Cam Follower] .....	<b>B-810</b>
Model CF-MR-B (Stainless Steel Type) [Cam Follower] .....	<b>B-812</b>
Model C-M6F (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model C-MT6×1 (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model CFN-R-A(Cam Follower Containing Thrust Balls) [Cam Follower] .....	<b>B-816</b>
Model CF-R (Popular Type (Spherical Outer Ring)) [Cam Follower] .....	<b>B-808</b>
Model CF-R-A (Cam Follower with Hexagon Socket (Spherical Outer Ring)) [Cam Follower] .....	<b>B-810</b>
Model CF-R-B (Cam Follower with Hexagon Socket (Spherical Outer Ring)) [Cam Follower] .....	<b>B-812</b>
Model CFT (Cam Follower with Tapped Greasing Hole (Cylindrical Outer Ring)) [Cam Follower] .....	<b>B-818</b>
Model CFT-M (Stainless Steel Type) [Cam Follower] .....	<b>B-818</b>
Model CFT-MR (Stainless Steel Type) [Cam Follower] .....	<b>B-818</b>
Model CFT-R (Cam Follower with Tapped Greasing Hole (Spherical Outer Ring)) [Cam Follower] .....	<b>B-818</b>
Model CNF (No Preload Type of Rolled Ball Screw) [Ball Screw] .....	<b>B-738</b>
Model C-PT1/8 (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model CSR [LM Guide] .....	<b>B-154</b>

## D

Model D20 [Slide Rail] .....	<b>B-569</b>
Model DC [Lead Screw Nut] .....	<b>B-788</b>
Model DCM [Lead Screw Nut] .....	<b>B-786</b>
Model DCMA [Change Nut] .....	<b>B-792</b>
Model DCMB [Change Nut] .....	<b>B-792</b>
Model DIK (Preload Type of Precision Ball Screw) [Ball Screw] .....	<b>B-652</b>
Model DIR Standard-Lead Rotary-Nut Ball Screw [Ball Screw] .....	<b>B-720</b>
Model DK (No Preload Type of Precision Ball Screw) [Ball Screw] .....	<b>B-686</b>
Model DKN (Preload Type of Precision Ball Screw) [Ball Screw] .....	<b>B-672</b>
Model DP [Spline Nut] .....	<b>B-414</b>
Model DPM [Spline Nut] .....	<b>B-412</b>

## E

Model E15 [Slide Rail] .....	<b>B-567</b>
Model E20 [Slide Rail] .....	<b>B-568</b>
Model EF Square Type Support Unit on the Supported Side [Ball Screw] .....	<b>B-762</b>
Model EK Square Type Support Unit on the Fixed Side [Ball Screw] .....	<b>B-754</b>
Model ER [Precision Linear Pack] .....	<b>B-476</b>

## F

Model FBL [Slide Rail]	
Model FBL27D .....	<b>B-551</b>
Model FBL27S .....	<b>B-542</b>
Model FBL27S-P14 .....	<b>B-543</b>
Model FBL35B .....	<b>B-549</b>
Model FBL35D .....	<b>B-555</b>
Model FBL35E-P14 .....	<b>B-552</b>
Model FBL35F .....	<b>B-564</b>
Model FBL35G-P13 .....	<b>B-553</b>
Model FBL35G-P14 .....	<b>B-554</b>
Model FBL35J .....	<b>B-546</b>
Model FBL35J-P13 .....	<b>B-547</b>
Model FBL35J-P14 .....	<b>B-548</b>
Model FBL35K .....	<b>B-560</b>
Model FBL35M .....	<b>B-545</b>
Model FBL35S .....	<b>B-544</b>
Model FBL35T .....	<b>B-550</b>
Model FBL35W .....	<b>B-556</b>
Model FBL48DR .....	<b>B-566</b>
Model FBL51H .....	<b>B-557</b>
Model FBL51H-P13 .....	<b>B-558</b>
Model FBL51H-P14 .....	<b>B-559</b>
Model FBL56F .....	<b>B-565</b>
Model FBL56H .....	<b>B-561</b>
Model FBL56H-P13 .....	<b>B-562</b>
Model FBL56H-P14 .....	<b>B-563</b>
Model FBW2560R [Slide Pack] .....	<b>B-536</b>
Model FBW3590R [Slide Pack] .....	<b>B-536</b>
Model FBW50110H [Slide Pack] .....	<b>B-537</b>
Model FBW50110R [Slide Pack] .....	<b>B-537</b>
Model FF Round Type Support Unit on the Supported Side [Ball Screw] .....	<b>B-766</b>
Model FKRound Type Support Unit on the Fixed Side [Ball Screw] .....	<b>B-758</b>
Model FT [Flat Roller] .....	<b>B-532</b>
Model FTW [Flat Roller] .....	<b>B-533</b>

## G

Model GL15 [LM Actuator]	
Ball Screw Drive Type Short Table Type of Model GL15 ..	<b>B-349</b>
Belt Drive Type Short Table Type of Model GL15 ...	<b>B-353</b>
Ball Screw Drive Type Long Table Type of Model GL15 ...	<b>B-348</b>

Belt Drive Type Long Table Type of Model GL15 .....	<b>B-352</b>
Model GL20 [LM Actuator]	
Ball Screw Drive Type Short Table Type of Model GL20...	<b>B-351</b>
Belt Drive Type Short Table Type of Model GL20 .....	<b>B-355</b>
Ball Screw Drive Type Long Table Type of Model GL20 ...	<b>B-350</b>
Belt Drive Type Long Table Type of Model GL20 .....	<b>B-354</b>
Model GSR-R [LM Guide] .....	<b>B-150</b>
Model GSR-T [LM Guide].....	<b>B-146</b>
Model GSR-V [LM Guide].....	<b>B-146</b>

## H

Recommended Shapes of Shaft Ends	
- Shape H (H1, H2, H3) [Ball Screw]	
Support Unit Model EK.....	<b>B-768</b>
Support Unit Model FK.....	<b>B-768</b>
Model HB (No Lubrication Type) [Rod End] .....	<b>B-862</b>
Model HBN [Ball Screw].....	<b>B-580</b>
Model HMG [LM Guide].....	<b>B-172</b>
Model HR [LM Guide].....	<b>B-138</b>
Model HR-M [LM Guide].....	<b>B-138</b>
Model HR-T [LM Guide] .....	<b>B-138</b>
Model HR-TM [LM Guide] .....	<b>B-138</b>
Model HRW-CA [LM Guide] .....	<b>B-108</b>
Model HRW-CAM [LM Guide] .....	<b>B-108</b>
Model HRW-CR [LM Guide].....	<b>B-110</b>
Model HRW-CRM [LM Guide].....	<b>B-110</b>
Model HRW-LRM [LM Guide].....	<b>B-110</b>
Model HS (No Lubrication, Corrosion-resistant Type)	
[Rod End] .....	<b>B-860</b>
Model HSR-A [LM Guide].....	<b>B-62</b>
Model HSR-AM [LM Guide].....	<b>B-62</b>
Model HSR-B [LM Guide].....	<b>B-64</b>
Model HSR-BM [LM Guide].....	<b>B-64</b>
Model HSR-CA [LM Guide].....	<b>B-76</b>
Model HSR-CAM [LM Guide] .....	<b>B-76</b>
Model HSR-CB [LM Guide] .....	<b>B-78</b>
Model HSR-CBM [LM Guide] .....	<b>B-78</b>
Model HSR-C Grade Ct [LM Guide] .....	<b>B-66</b>
Model HSR-HA [LM Guide] .....	<b>B-76</b>
Model HSR-HAM [LM Guide] .....	<b>B-76</b>
Model HSR-HB [LM Guide] .....	<b>B-78</b>
Model HSR-HBM [LM Guide] .....	<b>B-78</b>
Model HSR-HR [LM Guide] .....	<b>B-80</b>
Model HSR-LA [LM Guide].....	<b>B-62</b>
Model HSR-LAM [LM Guide].....	<b>B-62</b>
Model HSR-LB [LM Guide].....	<b>B-64</b>
Model HSR-LBM [LM Guide].....	<b>B-64</b>
Model HSR-LR [LM Guide].....	<b>B-70</b>
Model HSR-LRM [LM Guide].....	<b>B-70</b>
Model HSR-M1A [LM Guide].....	<b>B-182</b>
Model HSR-M1B [LM Guide].....	<b>B-184</b>
Model HSR-M1LA [LM Guide].....	<b>B-182</b>
Model HSR-M1LB [LM Guide].....	<b>B-184</b>
Model HSR-M1LR [LM Guide].....	<b>B-186</b>

Model HSR-M1R [LM Guide].....	<b>B-186</b>
Model HSR-M1YR [LM Guide] .....	<b>B-188</b>
Model HSR-M2A [LM Guide] .....	<b>B-204</b>
Model HSR-R [LM Guide].....	<b>B-70</b>
Model HSR-R Grade Ct [LM Guide] .....	<b>B-72</b>
Model HSR-RM [LM Guide].....	<b>B-68</b>
Model HSR-YR [LM Guide] .....	<b>B-74</b>
Model HSR-YRM [LM Guide] .....	<b>B-74</b>

## J

Recommended Shapes of Shaft Ends	
- Shape J (J1, J2 and J3) [Ball Screw]	
Support Unit Model BK.....	<b>B-770</b>
Models JPF (Preload Type of Rolled Ball Screw)	
[Ball Screw] .....	<b>B-736</b>
Model JR-A [LM Guide] .....	<b>B-164</b>
Model JR-B [LM Guide] .....	<b>B-164</b>
Model JR-R [LM Guide] .....	<b>B-164</b>

## K

Recommended Shapes of Shaft Ends	
- Shape K [Ball Screw]	
Support Unit Model BF .....	<b>B-772</b>
Support Unit Model EF .....	<b>B-772</b>
Support Unit Model FF .....	<b>B-772</b>
Model KR15 (with a Cover)	
[LM Guide Actuator] .....	<b>B-265</b>
Model KR15 Standard Type	
[LM Guide Actuator] .....	<b>B-264</b>
Model KR20 (with a Cover)	
[LM Guide Actuator] .....	<b>B-267</b>
Model KR20 Standard Type	
[LM Guide Actuator] .....	<b>B-266</b>
Model KR26 (with a Cover)	
[LM Guide Actuator] .....	<b>B-269</b>
Model KR26 Standard Type	
[LM Guide Actuator] .....	<b>B-268</b>
Model KR30H (with a Cover)	
[LM Guide Actuator] .....	<b>B-271</b>
Model KR30H (with a Cover)	
[LM Guide Actuator] .....	<b>B-273</b>
Model KR30H Standard Type	
[LM Guide Actuator] .....	<b>B-270</b>
Model KR30H Standard Type	
[LM Guide Actuator] .....	<b>B-272</b>
Model KR33 (with a Cover)	
[LM Guide Actuator] .....	<b>B-275</b>
Model KR33 (with a Cover)	
[LM Guide Actuator] .....	<b>B-277</b>
Model KR33 Standard Type	
[LM Guide Actuator] .....	<b>B-274</b>
Model KR33 Standard Type	
[LM Guide Actuator] .....	<b>B-276</b>

Model KR45H (with a Cover)	
[LM Guide Actuator] .....	<b>B-279</b>
Model KR45H (with a Cover)	
[LM Guide Actuator] .....	<b>B-281</b>
Model KR45H Standard Type	
[LM Guide Actuator] .....	<b>B-278</b>
Model KR45H Standard Type	
[LM Guide Actuator] .....	<b>B-280</b>
Model KR46 (with a Cover)	
[LM Guide Actuator] .....	<b>B-283</b>
Model KR46 (with a Cover)	
[LM Guide Actuator] .....	<b>B-285</b>
Model KR46 Standard Type	
[LM Guide Actuator] .....	<b>B-282</b>
Model KR46 Standard Type	
[LM Guide Actuator] .....	<b>B-284</b>
Model KR55 (with a Cover)	
[LM Guide Actuator] .....	<b>B-287</b>
Model KR55 Standard Type	
[LM Guide Actuator] .....	<b>B-286</b>
Model KR65 (with a Cover)	
[LM Guide Actuator] .....	<b>B-289</b>
Model KR65 Standard Type	
[LM Guide Actuator] .....	<b>B-288</b>
Model KS [LM Stroke] .....	<b>B-474</b>

## L

Model LBF (Medium Load Type) [Ball Spline] ....	<b>B-374</b>
Model LBG [Ball Spline] .....	<b>B-396</b>
Model LBGT [Ball Spline] .....	<b>B-398</b>
Model LBH [Ball Spline] .....	<b>B-378</b>
Model LBR [Ball Spline] .....	<b>B-376</b>
Model LBS with Recommended Shaft End Shape	
[Ball Spline] .....	<b>B-380</b>
Model LBS (Miniature Ball Spline) [Ball Spline] ..	<b>B-368</b>
Model LBS (Medium Load Type) [Ball Spline] ....	<b>B-370</b>
Model LBST (Heavy Load Type) [Ball Spline] .....	<b>B-372</b>
Model LD (Special Plumbing Fixtures)	
[Accessories for Lubrication] .....	<b>B-865</b>
Model LF [Ball Spline] .....	<b>B-388</b>
Model LF (Special Plumbing Fixtures)	
[Accessories for Lubrication] .....	<b>B-865</b>
Model LM [Linear Bushing] .....	<b>B-418</b>
Model LME [Linear Bushing] .....	<b>B-424</b>
Model LMF [Linear Bushing] .....	<b>B-428</b>
Model LMF-L [Linear Bushing] .....	<b>B-436</b>
Model LMF-M (Stainless Steel Type)	
[Linear Bushing] .....	<b>B-430</b>
Model LMF-ML (Stainless Steel Type)	
[Linear Bushing] .....	<b>B-438</b>
Model LM-GA (Metal Retainer Type)	
[Linear Bushing] .....	<b>B-420</b>
Model LMH [Linear Bushing] .....	<b>B-444</b>

Model LMH-L [Linear Bushing] .....	<b>B-446</b>
Model LMK [Linear Bushing] .....	<b>B-432</b>
Model LMK-L [Linear Bushing] .....	<b>B-440</b>
Model LMK-M (Stainless Steel Type)	
[Linear Bushing] .....	<b>B-434</b>
Model LMK-ML (Stainless Steel Type)	
[Linear Bushing] .....	<b>B-442</b>
Model LM-L [Linear Bushing] .....	<b>B-426</b>
Model LM-MG (Stainless Steel Type)	
[Linear Bushing] .....	<b>B-422</b>
Model LR [LM Roller] .....	<b>B-524</b>
Model LRA [LM Roller] .....	<b>B-525</b>
Model LRA-Z [LM Roller] .....	<b>B-525</b>
Model LRB [LM Roller] .....	<b>B-526</b>
Model LRB-Z [LM Roller] .....	<b>B-526</b>
Model LRU [LM Roller] .....	<b>B-527</b>
Model LR-Z [LM Roller] .....	<b>B-524</b>
Model LS [Linear Ball Slide] .....	<b>B-516</b>
Model LSC [Linear Ball Slide] .....	<b>B-518</b>
Model LSP [Linear Ball Slide] .....	<b>B-514</b>
Model LT with Recommended Shaft End Shape	
[Ball Spline] .....	<b>B-390</b>
Model LT [Ball Spline] .....	<b>B-386</b>
Model LTR [Ball Spline] .....	<b>B-406</b>
Models LTR-A Compact type [Ball Spline] .....	<b>B-404</b>

## M

Model MBF (Unfinished Shaft Ends) [Ball Screw] ..	<b>B-584</b>
Model MC (Nut Bracket) [Ball Screw] .....	<b>B-774</b>
Model MDK (No Preload Type of Precision Ball Screw)	
[Ball Screw] .....	<b>B-686</b>
Model MDK (Unfinished Shaft Ends) [Ball Screw] ..	<b>B-584</b>
Grease Gun Unit MG70	
[Accessories for Lubrication] .....	<b>B-864</b>
Model MST [LM Stroke] .....	<b>B-472</b>
Models MTF (No Preload Type of Rolled Ball Screw)	
[Ball Screw] .....	<b>B-738</b>
Model MX [LM Guide] .....	<b>B-160</b>

## N

Models NART-R (Non-separable Type	
with a Spherical Outer Ring)	
[Roller Follower] .....	<b>B-825</b>
Model NART-VR (Non-separable Type	
with a Spherical Outer Ring and Full Balls)	
[Roller Follower] .....	<b>B-825</b>
Models NAST (Separable Type	
with a Cylindrical Outer Ring)	
[Roller Follower] .....	<b>B-822</b>
Model NAST-R (Separable Type	
with a Spherical Outer Ring)	
[Roller Follower] .....	<b>B-822</b>

Models NAST-ZZ (Separable Type with a Cylindrical Outer Ring and Side Plates) [Roller Follower] .....	<b>B-823</b>
Model NAST-ZZR (Separable Type with a Spherical Outer Ring and Side Plates) [Roller Follower] .....	<b>B-823</b>
Model NB-T (No Lubrication Type) [Rod End] .....	<b>B-858</b>
Model NHS-T (No Lubrication Type) [Rod End] ..	<b>B-850</b>
Model NOS-T (No Lubrication, Male Thread Type) [Rod End] .....	<b>B-854</b>
Model NP3.2×3.5 (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model NP6×5 (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model NP8×9 (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model NR-A [LM Guide] .....	<b>B-98</b>
Model NR-B [LM Guide] .....	<b>B-102</b>
Model NR-LA [LM Guide] .....	<b>B-98</b>
Model NR-LB [LM Guide] .....	<b>B-102</b>
Model NR-LR [LM Guide] .....	<b>B-94</b>
Model NR-R [LM Guide] .....	<b>B-94</b>
Model NRS-A [LM Guide] .....	<b>B-100</b>
Model NRS-B [LM Guide] .....	<b>B-104</b>
Model NRS-LA [LM Guide] .....	<b>B-100</b>
Model NRS-LB [LM Guide] .....	<b>B-104</b>
Model NRS-LR [LM Guide] .....	<b>B-96</b>
Model NRS-R [LM Guide] .....	<b>B-96</b>
Model NS Heavy-load Type: Linear Motion [Ball Screw] .....	<b>B-732</b>
Model NS-A Compact Type: Straight Motion [Ball Screw] .....	<b>B-730</b>
Model NSR-TBC [LM Guide] .....	<b>B-178</b>

## P

Model PB (Standard Type) [Rod End] .....	<b>B-856</b>
Model PB1021B (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model PB107 (Grease Nipple) [Accessories for Lubrication] .....	<b>B-866</b>
Model PBA (Die Cast Type) [Rod End] .....	<b>B-857</b>
Model PHS (Female Threading Type) [Rod End] .....	<b>B-846</b>
Model POS (Male Thread Type) [Rod End] .....	<b>B-854</b>

## R

R Guide Model HCR [LM Guide] .....	<b>B-168</b>
Model RA (Separable Outer Ring Type) [Cross-Roller Ring] .....	<b>B-805</b>
Model RA-C (Single-Split Type) [Cross-Roller Ring] .....	<b>B-806</b>
Model RB (Separable Outer Ring Type) [Cross-Roller Ring] .....	<b>B-798</b>

USP-Grade Models RB and RE [Cross-Roller Ring] .....	<b>B-804</b>
Model RBH (Die Cast, Low Price Type) [Rod End] .....	<b>B-848</b>
Model RBI [Link Ball] .....	<b>B-840</b>
Model RBL [Link Ball] .....	<b>B-838</b>
Model RE (Two-piece Inner Ring Type) [Cross-Roller Ring] .....	<b>B-801</b>
Model RN (Lock Nut) [Ball Screw] .....	<b>B-776</b>
Model RNAST (Separable Type with a Cylindrical Outer Ring and No Inner Ring) [Roller Follower] .....	<b>B-824</b>
Model RNAST-R (Separable Type with a Spherical Outer Ring and No Inner Ring) [Roller Follower] .....	<b>B-824</b>
Model RSH-KM [LM Guide] .....	<b>B-128</b>
Model RSH-M [LM Guide] .....	<b>B-128</b>
Model RSH-VM [LM Guide] .....	<b>B-128</b>
Model RSH-WZM [LM Guide] .....	<b>B-134</b>
Model RSH-ZM [LM Guide] .....	<b>B-132</b>
Model RSR-KM [LM Guide] .....	<b>B-116</b>
Model RSR-M [LM Guide] .....	<b>B-114</b>
Model RSR-M1K [LM Guide] .....	<b>B-198</b>
Model RSR-M1N [LM Guide] .....	<b>B-198</b>
Model RSR-M1V [LM Guide] .....	<b>B-198</b>
Model RSR-M1WN [LM Guide] .....	<b>B-200</b>
Model RSR-M1WV [LM Guide] .....	<b>B-200</b>
Model RSR-N [LM Guide] .....	<b>B-114</b>
Model RSR-VM [LM Guide] .....	<b>B-116</b>
Model RSR-WM(WV) [LM Guide] .....	<b>B-118</b>
Model RSR-WN [LM Guide] .....	<b>B-118</b>
Model RSR-WVM [LM Guide] .....	<b>B-118</b>
Model RSR-WZM [LM Guide] .....	<b>B-124</b>
Model RSR-ZM [LM Guide] .....	<b>B-122</b>
Model RU (Integrated Inner/Outer Ring Type) [Cross-Roller Ring] .....	<b>B-796</b>

## S

Model SA1 [Spherical Plain Bearing] .....	<b>B-830</b>
Model SB [Spherical Plain Bearing] .....	<b>B-828</b>
Model SBK [Ball Screw] .....	<b>B-578</b>
Model SBN [Ball Screw] .....	<b>B-576</b>
Models SC35 to 50 [Linear Bushing] .....	<b>B-450</b>
Models SC6 to 30 [Linear Bushing] .....	<b>B-448</b>
Model SCR [LM Guide] .....	<b>B-56</b>
Model SF (Special Plumbing Fixtures) [Accessories for Lubrication] .....	<b>B-865</b>
Model SH [Linear Bushing] .....	<b>B-454</b>
Model SH-L [Linear Bushing] .....	<b>B-456</b>
Model SHS-C [LM Guide] .....	<b>B-6</b>
Model SHS-LC [LM Guide] .....	<b>B-6</b>
Model SHS-LR [LM Guide] .....	<b>B-10</b>
Model SHS-LV [LM Guide] .....	<b>B-8</b>
Model SHS-R [LM Guide] .....	<b>B-10</b>

Model SHS-V [LM Guide].....	<b>B-8</b>
Model SHW-CA [LM Guide].....	<b>B-44</b>
Model SHW-CR [LM Guide].....	<b>B-46</b>
Model SHW-HR [LM Guide].....	<b>B-46</b>
Model SK [Linear Bushing].....	<b>B-458</b>
Model SKR33(with a Cover) [LM Guide Actuator].....	<b>B-293</b>
Model SKR33(with a Cover) [LM Guide Actuator].....	<b>B-295</b>
Model SKR33 Standard Type [LM Guide Actuator].....	<b>B-292</b>
Model SKR33 Standard Type [LM Guide Actuator].....	<b>B-294</b>
Model SKR46(with a Cover) [LM Guide Actuator].....	<b>B-297</b>
Model SKR46(with a Cover) [LM Guide Actuator].....	<b>B-299</b>
Model SKR46 Standard Type [LM Guide Actuator].....	<b>B-296</b>
Model SKR46 Standard Type [LM Guide Actuator].....	<b>B-298</b>
Model SL [Linear Bushing].....	<b>B-452</b>
Model SNR-C [LM Guide].....	<b>B-30</b>
Models SNR-CH (Build to Order) [LM Guide].....	<b>B-38</b>
Model SNR-LC [LM Guide].....	<b>B-30</b>
Models SNR-LCH (Build to Order) [LM Guide].....	<b>B-38</b>
Model SNR-LR [LM Guide].....	<b>B-26</b>
Models SNR-LRH (Build to Order) [LM Guide].....	<b>B-34</b>
Model SNR-R [LM Guide].....	<b>B-26</b>
Models SNR-RH (Build to Order) [LM Guide].....	<b>B-34</b>
Model SNS-C [LM Guide].....	<b>B-32</b>
Models SNS-CH (Build to Order) [LM Guide].....	<b>B-40</b>
Model SNS-LC [LM Guide].....	<b>B-32</b>
Models SNS-LCH (Build to Order) [LM Guide].....	<b>B-40</b>
Model SNS-LR [LM Guide].....	<b>B-28</b>
Models SNS-LRH (Build to Order) [LM Guide].....	<b>B-36</b>
Model SNS-R [LM Guide].....	<b>B-28</b>
Models SNS-RH (Build to Order) [LM Guide].....	<b>B-36</b>
Model SRG-A [LM Guide].....	<b>B-208</b>
Model SRG-C [LM Guide].....	<b>B-208</b>
Model SRG-LA [LM Guide].....	<b>B-208</b>
Model SRG-LC [LM Guide].....	<b>B-208</b>
Model SRG-LR [LM Guide].....	<b>B-210</b>
Model SRG-LV [LM Guide].....	<b>B-210</b>
Model SRG-R [LM Guide].....	<b>B-210</b>
Model SRG-V [LM Guide].....	<b>B-210</b>
Model SR-M1SB [LM Guide].....	<b>B-194</b>
Model SR-M1TB [LM Guide].....	<b>B-194</b>
Model SR-M1V [LM Guide].....	<b>B-192</b>
Model SR-M1W [LM Guide].....	<b>B-192</b>
Model SRN-C [LM Guide].....	<b>B-214</b>
Model SRN-LC [LM Guide].....	<b>B-214</b>
Model SRN-LR [LM Guide].....	<b>B-216</b>
Model SRN-R [LM Guide].....	<b>B-216</b>

Model SR-SB [LM Guide].....	<b>B-88</b>
Model SR-SBM [LM Guide].....	<b>B-88</b>
Model SRS-M [LM Guide].....	<b>B-50</b>
Model SRS-WM [LM Guide].....	<b>B-52</b>
Model SR-TB [LM Guide].....	<b>B-88</b>
Model SR-TBM [LM Guide].....	<b>B-88</b>
Model SR-V [LM Guide].....	<b>B-86</b>
Model SR-VM [LM Guide].....	<b>B-86</b>
Model SR-W [LM Guide].....	<b>B-86</b>
Model SRW-LR [LM Guide].....	<b>B-220</b>
Model SR-WM [LM Guide].....	<b>B-86</b>
Model SSR-XTB [LM Guide].....	<b>B-20</b>
Model SSR-XV [LM Guide].....	<b>B-18</b>
Model SSR-XVM [LM Guide].....	<b>B-18</b>
Model SSR-XW [LM Guide].....	<b>B-16</b>
Model SSR-XWM [LM Guide].....	<b>B-16</b>
Model ST [LM Stroke].....	<b>B-464</b>
Model ST-B [LM Stroke].....	<b>B-464</b>
Models ST··UU [LM Stroke].....	<b>B-468</b>
Models ST··UU [LM Stroke].....	<b>B-470</b>
Models ST··UUB [LM Stroke].....	<b>B-468</b>
Models ST··UUB [LM Stroke].....	<b>B-470</b>

## T

Model TBS [Link Ball].....	<b>B-842</b>
----------------------------	--------------

## V

Cross Roller Guide Model VR [Cross Roller Guide/Ball Guide]	
Model VR (VR1).....	<b>B-480</b>
Model VR (VR12).....	<b>B-492</b>
Model VR (VR15).....	<b>B-494</b>
Model VR (VR18).....	<b>B-496</b>
Model VR (VR2).....	<b>B-482</b>
Model VR (VR3).....	<b>B-484</b>
Model VR (VR4).....	<b>B-486</b>
Model VR (VR6).....	<b>B-488</b>
Model VR (VR9).....	<b>B-490</b>
Model VRT Miniature Type (Tapped Base Type) [Cross Roller Table].....	<b>B-502</b>
Model VRT-A Miniature Type (Tapped Base Type) [Cross Roller Table].....	<b>B-504</b>
Model VRU [Cross Roller Table].....	<b>B-506</b>
Model VRU [Cross Roller Table].....	<b>B-508</b>
Model VRU [Cross Roller Table].....	<b>B-510</b>

## W

Model WGF (No Preload Type of Precision Ball Screw) [Ball Screw].....	<b>B-686</b>
Models WTF (No Preload Type of Rolled Ball Screw) [Ball Screw].....	<b>B-738</b>